

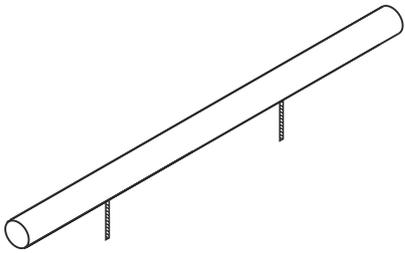




1

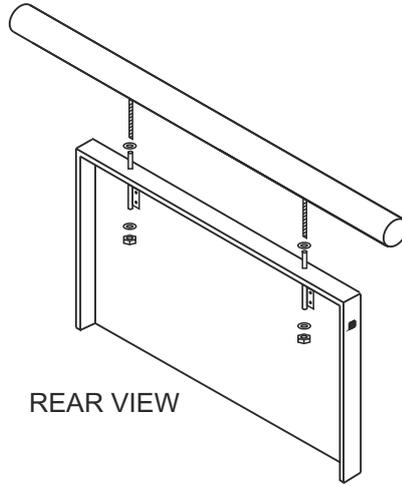

2

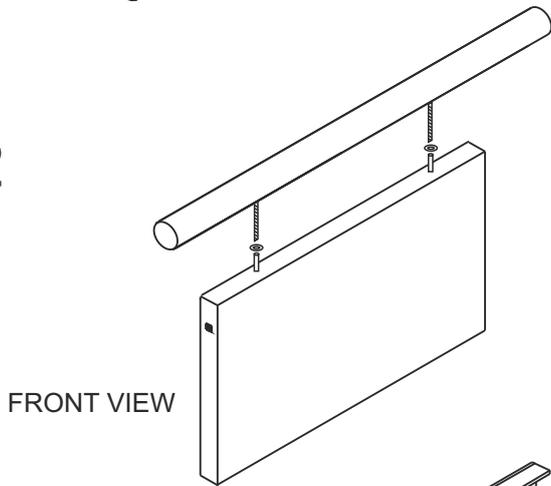

3

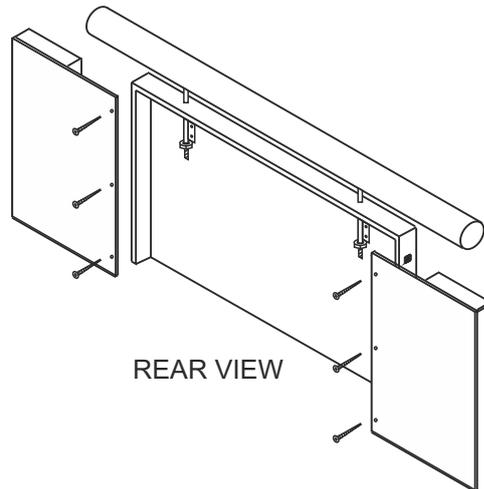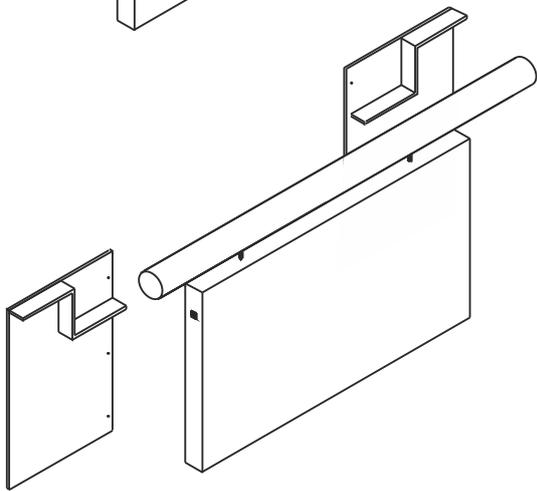

PLACE THE SIDE PANEL BESIDE THE HEADBOARD, AND BE SURE THE SHELF IS AGAINST THE HEADBOARD




FRONT VIEW

PLACE THREE SCREWS IN THE HOLES OF THE SIDE PANEL




REAR VIEW

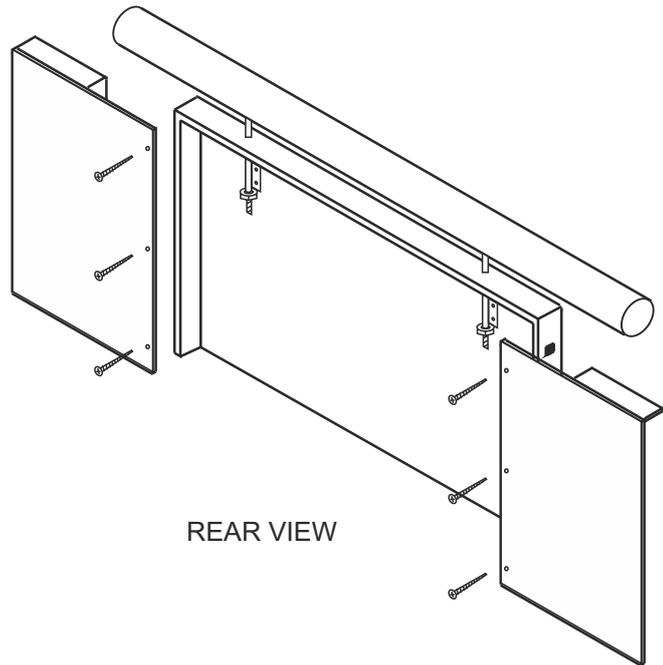

REAR VIEW

SCREW THE SCREWS THROUGH THE SIDE PANEL AND ATTACH IT TO THE HEADBOARD

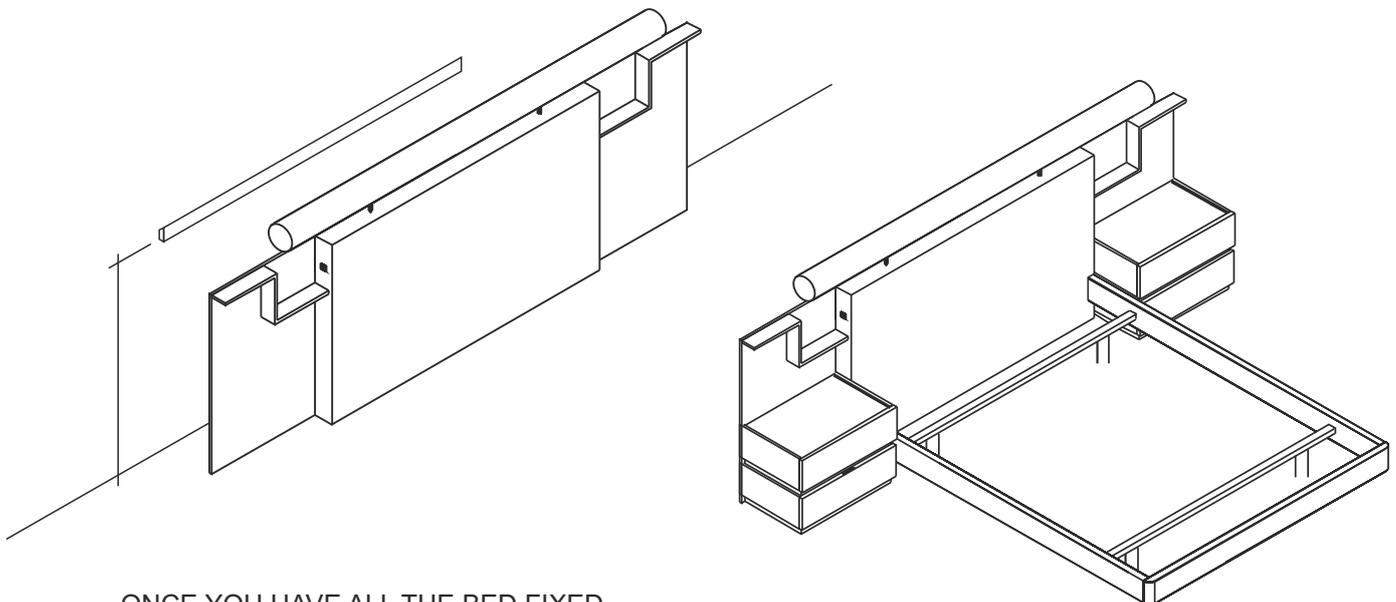

ONCE YOU HAVE ALL THE BED FIXED, HANG IT TO THE WALL, USING THE WOODEN RAIL TO ASSURE ALL THE BED.